


NOVA OSD update guide


- 1、Unpack the file

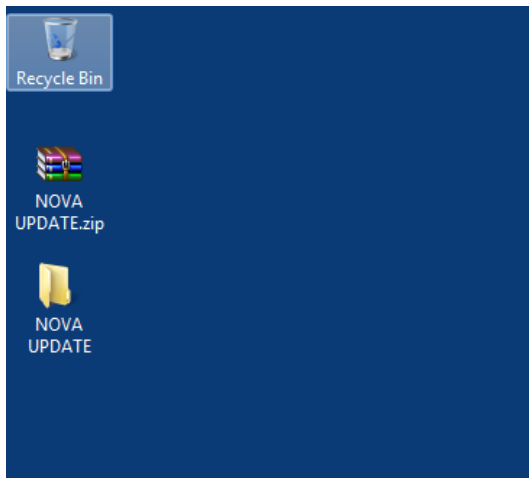


- 2、Install the driver




- 3、Power on the NOVA OSD and connect the update kit to the mainboard as shown on the pic below.

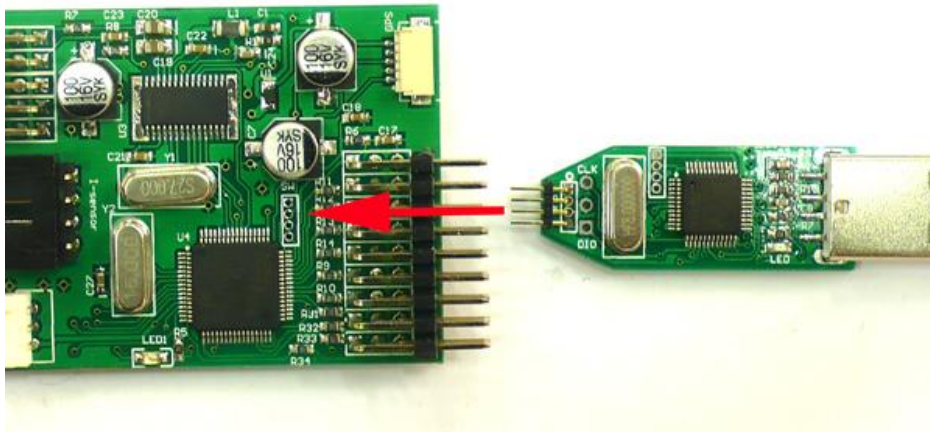


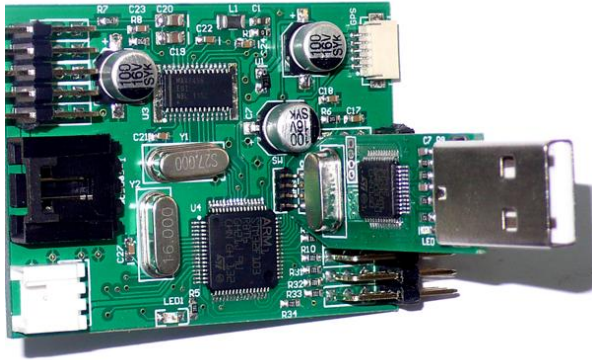

- 4、 Update the firmware by clicking on **Nova OSD update.exe**.

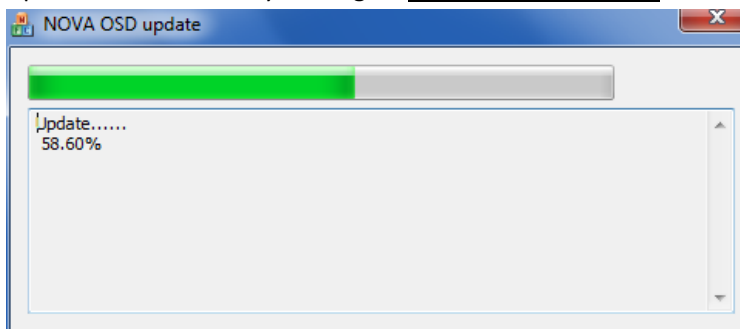

The update progress is as above, DO NOT disconnect the update kit or cut off the power supply of NOVA OSD.

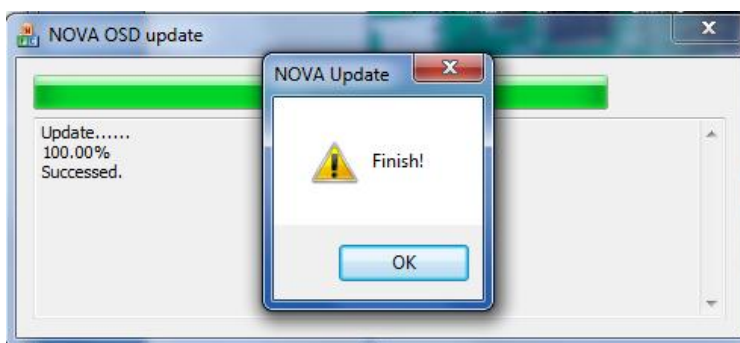

Click on OK to finish the update, cut off the power of NOVA OSD and remove the update kit.

- 5、 Power on the OSD again, and if you see V1.1 at the right corner, the update is finished.

