


STORM OSD update guide

- 1、Unpack the file

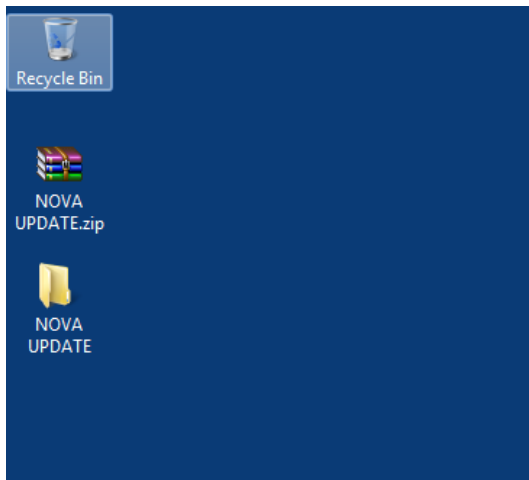


- 2、Install the driver




- 3、Power on the STORM OSD and connect the update kit to the main board as shown on the pictures below.



- 4、 Update the firmware by clicking on **STORM OSD update.exe**.

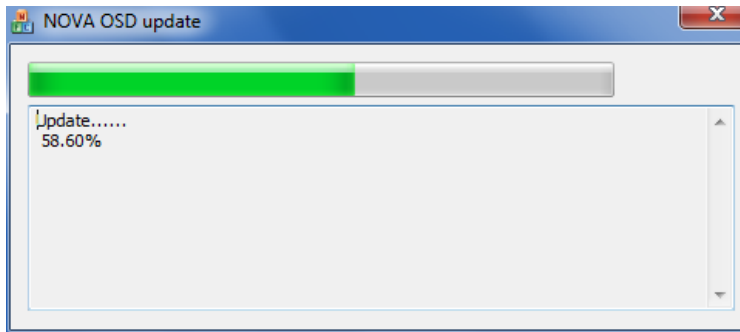

The update progress is as above, DO NOT disconnect the update kit or cut off the power supply of STORM OSD.

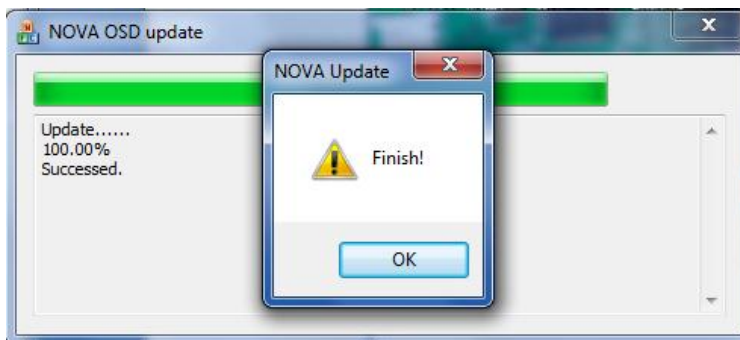

Click on OK to finish the update then cut off the power of STORM OSD and remove the update kit.