

## ***STORM V1.1 upgrade notice***

1. *Please strictly conform to the upgrade manual to upgrade your storm OSD.*
2. *The OSD will enter auto detection mode during the first power on, the main board should be placed strictly horizontally and statically, avoid any movement or vibration. If there is any error during the detection, there will be error shows on the OSD screen, cycle the power and do it again.*
3. *When the detection is done, the OSD screen will enter the working mode, please set all your configurations one time again, specially, don't forget to reset the GYRO and confirm the SEV CENTER items.*

### ***What's new for the new firmware V1.1?***



1. *User can choose to show or hide the AHl (Artificial Horizon Indicator), the size can be adjusted through the percent value to fit different cameras and monitors.*
2. *The New fence mode. In PA mode, when the flying range exceed the setting value, the storm will automatically enter RTH mode until user switch back to manual mode, when the value is set to zero, which will disable the function.*
3. *User can choose to show or hide the GPS coordinate data, when choose "Y", the coordinate data will shows on every screens, when choose "N", the coordinate data will only shows on the RTH mode screen.*

4. *If the OSD main-board is not placed horizontally when power on, there will be a small plane icon shown and flash on the screen and the OSD won't enter the working mode. As below picture shows:*



